
PHOSPHINE

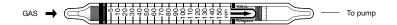

1. PERFORMANCE

1) Measuring range $\begin{array}{c} \text{1.5-150 ppm} \\ \text{Number of pump strokes} \end{array}$

2) Sampling time : 1.5 minute/1 pump stroke

3) Detectable limit : 3 ppm4) Shelf life : 3 years5) Operating temperature $: 0 \sim 40 \,^{\circ}\text{C}$

6) Reading : Direct reading from the scale calibrated by 1 pump stroke

7) Colour change : White→ Yellow

2. RELATIVE STANDARD DEVIATION

RSD-low: 10% RSD-mid.: 5% RSD-high: 5%

3. CHEMICAL REACTION

By reacting with Mercuric chloride, Mercuric phosphorus chloride is produced.

 $PH_3 + HgCI_2 + H_2O \rightarrow Hg_3P_2 \cdot 3HgCI_2 \cdot 3H_2O$

4. CALIBRATION OF THE TUBE

STANDARD GAS CYLINDER METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

Substance	%	Interference	Coexistence
Hydrogen selenide	5	Brown stain is produced.	Higher readings are given.
Hydrogen sulphide	5	"	"