NAPHTHALENE



1. PERFORMANCE

1) Measuring range : 10-100 ppm Number of pump strokes 1(100ml)

2) Sampling time : 1.5 minutes/1 pump stroke

3) Detectable limit 2ppm 4) Shelf life 1 year 0 ~ 40 ℃ 5) Operating temperature

6) Temperature compensation : Necessary (See "TEMPERATURE CORRECTION TABLE")

: Graduations printed on the tube are calibrated by Isobutyl acetate at 1 pump stroke 7) Reading and Naphthalene is determined by using a conversion chart at pump strokes.

8) Colour change : Pale yellow → Blackish brown

2. RELATIVE STANDARD DEVIATION

RSD-low: 10% RSD-mid.: 5% RSD-high: 5%

3. CHEMICAL REACTION


Chromium oxide is reduced. $C_{10}H_8 + Cr^{6+} + H_2SO_4 \rightarrow Cr^{3+}$


4. CALIBRATION OF THE TUBE


VAPOUR PRESSURE METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

Substance		Interference	Coexistence
Methanol	FIG.1	Pale blue stain is produced.	Higher readings are given.
Butyl acetate		"	"
Aromatic hydrocarbons	FIG.2	Brown stain is produced.	"
Aliphatic hydrocarbons (more than C ₃)		"	"
Esters		"	"

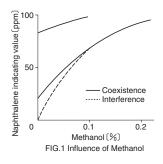

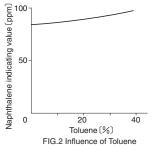



No.153U Tube reading (ppm)