
N, N-DIMETHYL ACETAMIDE

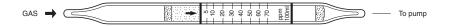

1. PERFORMANCE

1) Measuring range \cdot 5-70 ppm Number of pump strokes $2(200 \text{m} \ell)$

2) Sampling time : 2 minutes/1 pump stroke

3) Detectable limit : 1 ppm 4) Shelf life : 1 year 5) Operating temperature : $10 \sim 40 \, ^{\circ}$ C

6) Temperature compensation : Necessary under 20 °C (See "TEMPERATURE CORRECTION TABLE")

7) Reading : Direct reading from the scale calibrated by 2 pump strokes

8) Colour change : Pale purple → Pale yellow

2. RELATIVE STANDARD DEVIATION

RSD-low: 15% RSD-mid.: 15% RSD-high: 15%

3. CHEMICAL REACTION

By reacting with Alkali, Dimethyl amine is produced. Dimethyl amine reacts on Phosphoric acid and PH indicator is discoloured.

 $CH_3CON(CH_3)_2 \rightarrow HN(CH_3)_2$

 $2HN(CH_3)_2 + H_3PO_4 \rightarrow ((CH_3)_2NH_2)_2HPO_4$

4. CALIBRATION OF THE TUBE

DIFFUSION TUBE METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

Substance	Interference	Coexistence	
Carbon dioxide	The accuracy of readings is not affected.	0.17%	Lower readings are given.
Sulphur dioxide	"		
Ammonia	Similar stain is produced.		Higher readings are given.
Amines	"		"
Hydrazine	"		"

TEMPERATURE CORRECTION TABLE

Tube	Corrected Concentration (ppm)			
Readings (ppm)	10 °C (50 °F)	15 °C (59 °F)	20-40 °C (68-104 °F)	
70	120	84	70	
60	102	70	60	
50	85	60	50	
40	67	47	40	
30	50	36	30	
20	35	23	20	
10	17	12	10	
5	10	6	5	